

# SailTrak Race Control Tablet General Instructions

## 1. Components

- 1.1. The SailTrak Race Control app is now available on a Ulefone tablet. When the tablet is not in use it should be found on the desk in the Race Office with the yellow charging cable connected.
- 1.2. The system comprises the following components:
  - 1.2.1. Ulefone tablet with SailTrak Race Control app
  - 1.2.2. Gooseneck tablet holder to attach the tablet to a pole
  - 1.2.3. Race Control Air Horn Relay Switch (to be left in the tablet carry case when not in use)
  - 1.2.4. Shelly Smartplug (to remain in the Race Office)
  - 1.2.5. 66W fast charger and yellow USB C cable (to remain in the Race Office)
  - 1.2.6. Tablet carry case





Air Horn Relay Switch

## 2. Using the Race Control Tablet

- 2.1. The Ulefone tablet weighs about 1.2kg so should be supported on a stand or used with the gooseneck tablet holder.
- 2.2. The Air Horn relay switch is only used when the Race Control app is the primary timer source.
- 2.3. Disconnect the yellow charging cable from the tablet and push the waterproof plug into the hole. Leave the yellow cable connected to the charger in the Race Office.
- 2.4. On Stan securely clamp the gooseneck tablet holder to the yellow flag pole.
- 2.5. Attach the tablet to the gooseneck tablet holder.
- 2.6. If you are using Race Control as the primary timer plug the Air Horn Relay Switch into the NL4 socket on Stan per the Race Control Air Horn Setup instructions below.
- 2.7. The tablet is used in portrait mode with the orange button located bottom right and the charging port at the bottom. For info a long press on the orange button will take a screen copy that can be viewed using the Gallery app.
- 2.8. Wake the tablet by pressing the button located at the bottom edge to the right hand side of the charging port.
- 2.9. The unlock code for the tablet is the club main gate code.
- 2.10. Instructions how to use the Race Control app are located in the Drive app under the Documents folder.
- 2.11. After use, return the tablet to the Race Office desk and reconnect the yellow USB C cable. Check the yellow cable is plugged into the charger, the charger is plugged into the Shelly Smartplug and the power socket is switched on.
- 2.12. Charging of the table is controlled by a Battery Saver service that switches on the Shelly Smartplug when the battery charge level is below 70% and switches off when the level is above 80%.

### 3. Race Control Air Horn Setup

- 3.1. Plug the Air Horn Relay Switch into the NL4 socket on Stan and turn on the power switch.
- 3.2. On the Race Control mobile enable Wi-Fi hotspot:
  - 3.2.1. Launch **Settings** app
  - 3.2.2. Select **Network & Internet**
  - 3.2.3. Select **Hotspot and tethering**
  - 3.2.4. Select **Wi-Fi hotspot**
  - 3.2.5. Enable **Use Wi-Fi hotspot**
  - 3.2.6. Click the back arrow to return to the **Hotspot and tethering** screen
  - 3.2.7. Wait until Wi-Fi hotspot shows **1 device connected**
- 3.3. Launch Race Control app and start a countdown to verify the air horn is working.
- 3.4. Note that Wi-Fi hotspot will automatically turn off when there is no device connected to the hotspot for longer than 10 minutes.

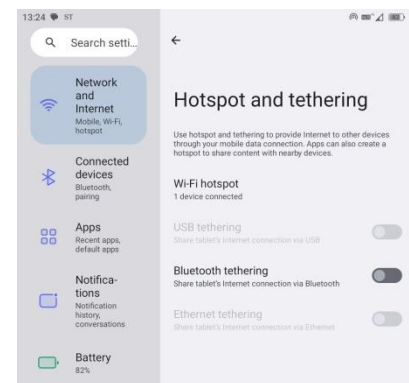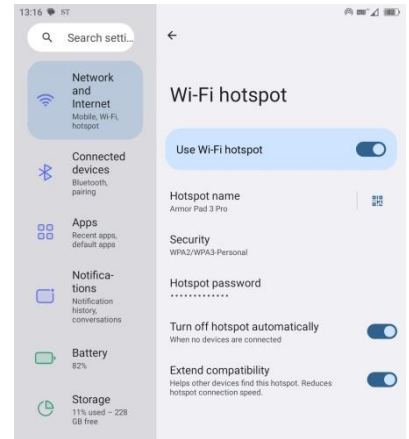

Gooseneck Tablet Holder