TERA RIGGING HINTS and TIPS

Rigging

- 1. Point boat head to wind
- 2. Take off cover and store safely
- 3. All items should be found in the boat except for the pre-rolled sail and mast which will be in the wooden boat shed. Get the sail/mast combination with the SAME number as the boat.
- 4. Make sure the BUNG is in, on transom.



Rudder


- 1. Place the rudder on the transom mount.
- 2. Make sure the tiller extension goes under the transom rope
- 3. If this Tera has a split pin ensure it is in place, if not make sure the rudder is tied on to rhe boat
- 4. Become familiar with the uphaul and downhaul for the rudder. In this diagram the yellow line holds the rudder out of the water. When in the water the yellow rope should be released and the elasticised white rope should be pulled and then put in the cleat to hold the rudder in the water.




Split pin

Mast and boom

- 1. Put the mast in the mast plate with the button facing forward.
- 2. Push down and then rotate the mast through 180 degrees.
- 3. When complete the clip is pointing to the rear

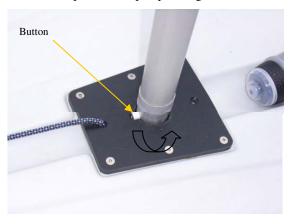

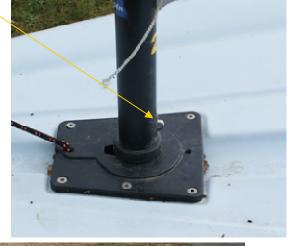

- 4 Attach boom to mast above gooseneck
- 5 Attach kicker to clip at base of mast
- 6 Ensure main sheet is not twisted





Mainsail

- 1. Unfurl the sail and attach to the clew hook at the end of the boom, The hook goes through the EYELET not any straps.
- 2. The sail should be as close to the boom as possible.
- 3. Tension using the outhaul—the outhaul runs along the top of the boom and has a cleat to hold it in place







4. Finally there is a downhaul on the front of the mast. Pull tight.

Daggerboard

1. When on the water put the daggerboard in the central housing and make sure the shock cord is attached around the mast to prevent loss during an inversion.



Reefing

- 1. It is possible to reef the Tera
- 2. Take off the kicker from the clip at the base of the mast.
- 3. Take the sail off the clew hook at the rear of the boom
- 4. Wrap the sail TWICE round the mast

Do not overwrap as you will damage the top batten Make sure the batten is not going round the mast

- 5. Using the outhaul move the clew hook forward, you may have to release from the cleat.
- 6. Take clew of sail and put back onto the clew hook
- 7. Tighten using the outhaul.

Putting the Tera away

- 1. Take out the daggerboard on the water
- 2. Place the boat on a trailer while in the water. The boat should NOT be dragged up the beach.
- 3. Undo sail from clew hook at end of boom
- 4. Undo kicker from bottom of Mast
- 5. Take boom off and lie in boat
- 6. Furl the sail. If you wrap it the right way the small white hook on the sail should be on the outside. The strap at the clew of the sail then goes round the mast and hooks onto the small white hook.
- 7. Twist the mast and pull up. The mast and sail go back into the Log Cabin.
- 8. Take off the rudder.
- 9. Place Boom (with kicker still attached) rudder, daggerboard, in the boat. Put on cover. Put boat back in the right spot.

