

The clock must be set before the oven will work. To set the clock:

- 1. Press and hold as above
- 2. At the same time press or + until the correct time shows

cooker

